

SXTsq series

The SXTsq is an outdoor wireless router with a built in directional antenna. It can be used as a CPE or for point to point links (use RouterOS wireless mode “bridge” to work as a single-client AP for point to point scenarios).

Assembly and mounting

The device comes bundled with a metallic mounting ring, which can be used on one of the three ring mount slots on the back side of the device. Use a Phillips screwdriver to loosen the metallic ring, slide one end of it through the most convenient of the three mounting slots and then position the device on the pole where it will be mounted. Slide the loose end of the mounting ring back to its closing latch and use the screwdriver to tighten it. The included ring mount allows for mounting on 2-7 cm diameter poles.

Connecting

1. Open the ethernet door to connect an ethernet cable to the ethernet port, connect the other end of the ethernet cable to the included PoE injector
2. Plug the PoE injector into your network switch or computer
3. Plug the included power supply into the PoE injector to start up the device
4. Set LAN computer IP configuration to *automatic* (DHCP)
5. Default IP address of the unit is 192.168.88.1, open this address in your web browser to start configuration. The username is admin and there is no password

The device is preconfigured as a wireless client (CPE), and all you need to do is select the AP to connect to and set a device password. You can do this in the quickSET tab that is loaded by default. In case IP connection is not available, Winbox can be used to connect to the MAC address of the device.

In case you wish to boot the device from network, for example to use MikroTik Netinstall, hold the RESET button of the device when starting it, until the LED light turns off, then the device will start to look for Netinstall servers.

More information about using RouterOS and connecting to this device in our documentation: <http://mt.lv/help>

Powering

The device only accepts 10-30 V power from Passive PoE injectors (one power supply and PoE injector are included)

Extension Slots and Ports

- One ethernet (10/100 Mbit or Gigabit, depends on model), supporting automatic cross/straight cable correction (Auto MDI/X), so you can use either straight or cross-over cables for connecting to other network devices.
- One Integrated Wireless with built in 23 degree directional antenna, max gain 16dBi

Buttons and Jumpers

RouterBOOT reset button has the following functions. Press the button and apply the power, then:

- Release the button when green LED starts flashing, to reset RouterOS configuration to defaults.
- Release the button when the LED turns solid green to clear all configuration and defaults.
- Release the button after LED is no longer lit (~20 seconds) to cause device to look for Netinstall servers (required for reinstalling RouterOS over network).

Regardless of the above option used, the system will load the backup RouterBOOT loader if the button is pressed before power is applied to the device. Useful for RouterBOOT debugging and recovery.

The device includes a grounding connection (marked \pm) which you should connect to the grounding installation of the tower or building where the device will be used. This is to substantially reduce risk of ESD and lightning damage.

Operating System Support

The device only supports RouterOS software with the version number at or above what is indicated in the RouterOS menu /system resource. Other operating systems have not been tested.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.



This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.

IMPORTANT: Exposure to Radio Frequency Radiation.

13 cm minimum distance has to be maintained between the antenna and the occupational user and 28 cm to general public. Under such configuration, the FCC radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.

Antenna Installation. WARNING: It is installer's responsibility to ensure that when using the authorized antennas in the United States (or where FCC rules apply); only those antennas certified with the product are used. The use of any antenna other than those certified with the product is expressly forbidden in accordance to FCC rules CFR47 part 15.204. The installer should configure the output power level of antennas, according to country regulations and per antenna type. Professional installation is required of equipment with connectors to ensure compliance with health and safety issues.

FCC ID numbers: SXTsq Lite5: TV7LHG5NDM; SXTsq 5: TV7LHG5HPND; SXTsq 5 ac: TV7LHG5ACD; SXTsq Lite2: TV7SXTSQ-2ND

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC numbers: SXTsq Lite5: 7442A-LHG5NDM; SXTsq 5: 7442A-LHG5HPND; SXTsq 5 ac: 7442A-LHG5ACD; SXTsq Lite2: 7442A-SXTSQ2ND



CE declaration of conformity



Full Declaration of Conformity (DoC) may be obtained by visiting our product page on <https://mikrotik.com>

Maximum Output Power (EIRP) in 5470 - 5725 MHz is 27dBm.

Manufacturer: Mikrotikls SIA, Pernavas street 46, Riga, Latvia, LV1009.

EN	Hereby, Mikrotíkls SIA declares that this routerboard is in compliance with the essential requirements and other relevant provisions of directive 2014/53/ec.
BG	С настоящето, Mikrotíkls SIA декларира, че routerboard е в съответствие със съществените изисквания и другите приложими разпоредби на директива 2014/53/ec.
CZ	Mikrotíkls SIA tímto prohlašuje, že routerboard splňuje základní požadavky a všechna příslušná ustanovení směrnice 2014/53/es.
DK	Undertegnede Mikrotíkls SIA erklaerer herved, at følgende udstryk routerboard overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/ef.
DE	Hiermit erklärt Mikrotíkls SIA dass sich das Gerät routerboard in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen bestimmungen der richtlinie 2014/53/eg befindet.
EE	Käesolevaga kinnitab Mikrotíkls SIA seadme routerboard vastavust direktiivi 2014/53/eü põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
GR	Με την παρούσα ο κατασκευαστής Mikrotíkls SIA δηλώνει ότι routerboard συμμορφώνεται προς τις ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 2014/53/ek
ES	Por la presente, Mikrotíkls SIA declara que este routerboard cumple con los requisitos esenciales y otras exigencias relevantes de la directiva 2014/53/ec.
IT	Con la presente Mikrotíkls SIA dichiara che questo routerboard è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/ce.
LV	Ar šo Mikrotíkls SIA deklarē, ka routerboard atbilst direktīvas 2014/53/ek būtiskajam prasībām un citiem ar to saistītajiem noteikumiem.
LT	Šiuo Mikrotíkls SIA deklaruoja, kad šis routerboard atitinka esminius reikalavimus ir kitas 2014/53/eb direktyvos nuostatas
HU	A Mikrotíkls SIA ezzennel kijelenti, hogy a routerboard típusú beren-dezés teljesít az alapvető követelményeket és más 2014/53/ek irányelvben meghatározott vonatkozó rendelkezéseket.
NL	Hierbij verklaart Mikrotíkls SIA dat het toestel / routerboard in overeenstemming is met de essentiële eisen en de andere relevante bepalin-gen van richtlijn 2014/53/eg.
PL	Niniejszym Mikrotíkls SIA deklaruje że routerboard jest zgodny z zasadniczymi wymaganiami i innymi właściwymi postanowieniami dyrektywy 2014/53/ec.
PT	Eu, Mikrotíkls SIA declaro que o routerboard cumpre os requisitos essenciais e outras provisões relevantes da directiva 2014/53/ec.
RO	Prin prezenta, Mikrotíkls SIA declară că aparatul routerboard este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale directivei 2014/53/ce.
SL	Mikrotíkls SIA týmto vyhlásuje, že routerboard splňa základné požiadavky a všetky príslušné ustanovenia smernice 2014/53/es.
SI	Mikrotíkls SIA izjavlja, da je ta routerboard v skladu z bistvenimi zahtevami in drugimi relevantnimi določili direktive 2014/53/es.
FI	Mikrotíkls SIA vakuuttaa täten että routerboard tyypipinen laite on direktiivin 2014/53/ey oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
SE	Härmed intygar Mikrotíkls SIA att denna routerboard är i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/eg.
NO	Mikrotíkls SIA erklaerer herved at routerboard er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/ef.

EN. Instruction manual: Connect the power adapter to turn on the device. Open 192.168.88.1 in your web browser, to configure it. More information on <http://mt.lv/help>

BG. Инструкция: Свържете адаптера на захранване, за да включите устройството. Отворете 192.168.88.1 в уеб браузър, за да настроите продукта. Повече информация в <http://mt.lv/help>

pro konfiguraci produktu. Vice informaci najdete v <http://mt.lv/help>. **DK. Instruktionsbog:** Tilslut strømadapteren for at tænde for enheden. Åbn 192.168.88.1 i en webbrowser til at konfigurere produktet. Mere information i <http://mt.lv/help>. **FR. Mode d'emploi:** Connectez l'adaptateur d'alimentation pour allumer l'appareil. Ouvez 192.168.88.1 dans un navigateur Web pour configurer le produit. Plus d'informations dans <http://mt.lv/help>. **DE. Bedienungsanleitung:** Verbinden Sie den

Ouvrez 192.168.88.1 dans un navigateur Web pour configurer le produit. Plus d'informations dans http://mt.lv/hg/DE_Bedienungsanleitung. Verbinden Sie das Gerät à l'aide de la fonction "WPS".

EE. Kasutusjuhend: Ühendage toiteadapter seadme sisselülitamiseks. Avatud 192.168.88.1 in veebilehitseja seadistada toodet. Rohkem teavet <http://mt.lv/help>.

ES. Manual de instrucciones: Conecte el adaptador de alimentación para encender la unidad. Abra 192.168.88.1 en un navegador web para configurar el

ES. Manual de instrucciones: Conecte el adaptador de alimentación para encender la unidad. Abra 192.168.88.1 en un navegador web para configurar el producto. Más información en <http://mt.lv/help>. **IT. Manuale di istruzioni:** Collegare l'adattatore di alimentazione per accendere l'unità. Aprire 192.168.88.1 in un browser Web per configurare il prodotto. Maggiori informazioni in <http://mt.lv/help>. **LV. Lietošanas instrukcija:** Pievienojiet Strāvas adapteri, lai iestēgtu ierīci. Atvērt 192.168.88.1 ar interneta pārlūku, lai konfigurētu produktu. Plašāka informācija <http://mt.lv/help>. **LT. Naudojimosi instrukcija:** Prijunkite maitinimo adapteri įjunkite

Csatlakoztassa a hálózati adaptort a készüléki bekapcsolásához. Megnyitása 192.168.88.1 egy webböngészőben beállítani a termékét. Több információ

Csatlakozással hozzájárhat a készülék bekapcsolásához. Megnyissa 192.168.88.1 egy webböngészőben beállítani a terméket. További információk: [NL Handleiding](http://mt.lv/help/NL_Handleiding): Sluit voedingsadapter aan op het apparaat in te schakelen. Open 192.168.88.1 in een webbrowser om het product te configureren. Meer informatie in [PL Instrukcja obsługi](http://mt.lv/help/PL_Instrukcja_obsługi): Podłącz adapter zasilania, aby włączyć urządzenie. Otwórz 192.168.88.1 w przeglądarce

configuração. Mais informações em <http://mt.lv/help>. PT. Instruções de utilização: Conecte adaptador zasilania, aby włączyć urządzenie. Otwórz 192.168.88.1 w przeglądarce internetowej, aby skonfigurować urządzenie. Więcej informacji w <http://mt.lv/help>. PT. Manual de instruções: Conecte o adaptador de alimentação para ligar o aparelho. Abra 192.168.88.1 em um navegador da web para configurar o produto. Mais informações em <http://mt.lv/help>. RO. Instructiuni de utilizare: Conectati adaptorul de alimentare pentru a porni aparatul. Deschide 192.168.88.1 intr-un browser web pentru a configura produsul. Mai multe informatii in <http://mt.lv/help>. SK.

Návod na použitie: Pripojte napájací adaptér k zapnutiu prístroja. Otvorte 192.168.88.1 vo webovom prehľadáči pre konfiguráciu produktu. Viac informácií nájdete v <http://mt.lv/help>.
Si. Navodila: Prikľúčte napajalník za vklap naprave. Odpríte 192.168.88.1 v spletnem brskalníku nastavíť izdelek. Več informacij v <http://mt.lv/help>.
Fl. Käyttöohje: Kytke virtaalähde päälle laitteeseen. Avaa 192.168.88.1 in selaimen määrittää tuotteen. Lisää tietoa <http://mt.lv/help>.
SE. Instruktionsmanual: Anslut

nätadapters för att slå på enheten. Öppna 192.168.88.1 i en webbläsare för att konfigurera produkten. Mer information på <http://mt.lv/help>.
Koble strømadapteren for å slå på enheten. Åpne 192.168.88.1 i en nettleser for å konfigurere produktet. Mer informasjon på <http://mt.lv/help>.
NO. Bruksanvisningen:
GR. εγχειρίδιο οδηγών: Συνδέστε τον προσαρμόγεια τροφοδοσίας για να ενεργοποιήσετε τη μονάδα. Ανοίξτε 192.168.88.1 σε ένα πρόγραμμα περιήγησης στο Web για να